

**Flare-groove welds** = A groove formed when one member of the joint has a radius.



**Weld does not fill radius  
=  
Unacceptable (Undersize)**



**Underfilled flare-bevel  
=  
Excessive concavity**



The size of a flare-groove weld is considered to extend only to the tangent points of the members:

